



MACHINE DISH WASH DETERGENT

- Removes soilage and food deposits
- Economical in use
- Anti-corrosive protects your machine

A machine dishwash detergent that removes soiling and food deposits.

USES

Dishi is a clear liquid with a high sequestrant content, which allows it to be used effectively in both soft and hard water areas. An anti-corrosive agent has been added to the formula to protect the machine.

Designed for washing cutlery, crockery, stainless steel and utensils, Dishi is suitable for all automatic dish washing machines in cafés, restaurants, hotel kitchens, canteens, etc.

Can be used as an effective detergent for tray washing machines in the food industry.

DIRECTIONS

Put dosing tube into the container of DISHI, so that it reaches the bottom. The dosing unit, which has been pre-set to a specific concentration, will automatically dispense DISHI into the machine.

N.B. Do not use on aluminium, zinc, magnesium and their alloys.





DILUTIONS

DISHI : WATER

Soft water areas: 1 - 4 mls per litre of water Hard water areas: 4 - 8 mls per litre of water



Code: 314

